
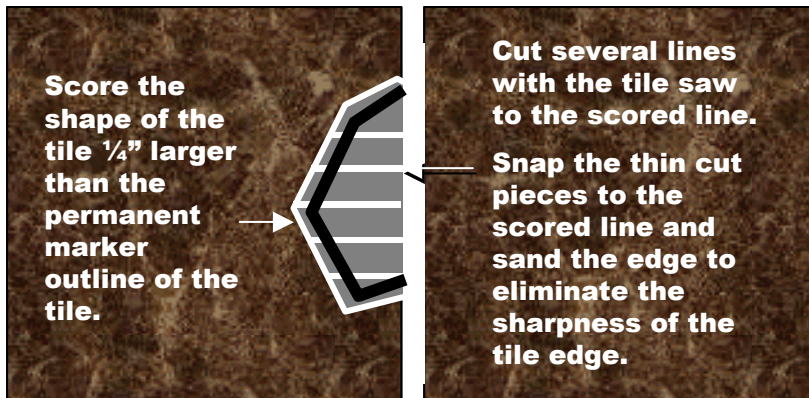


Instructions to Place a Custom Tile into Manufactured Tiles

Place the custom tile over two manufactured tiles that are placed side-by-side.


Trace the outer perimeter of the tile onto the manufactured tile with a permanent marker.

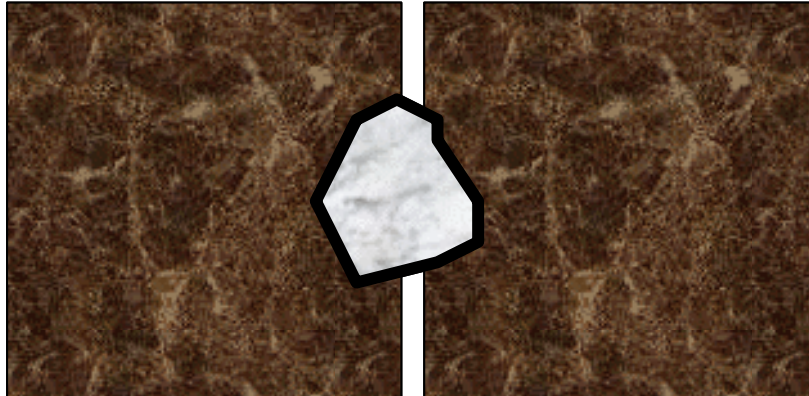

Score the shape of the tile $\frac{1}{4}$ " larger than the permanent marker outline of the tile.

Cut several lines with the tile saw to the scored line.

Snap the thin cut pieces to the scored line and sand the edge to eliminate the sharpness of the tile edge.

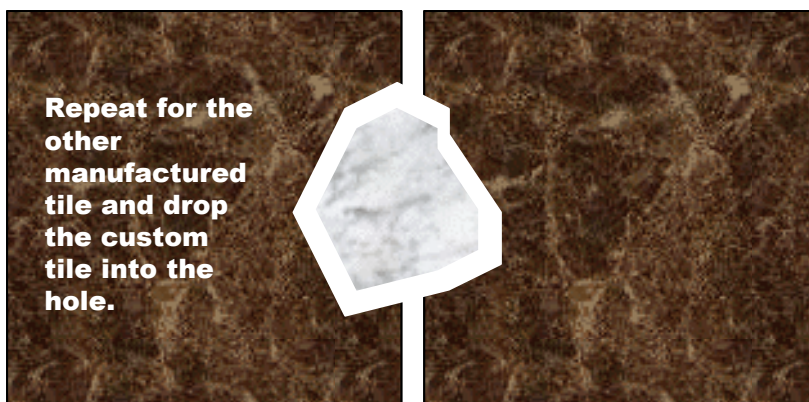

Repeat for the other manufactured tile and drop the custom tile into the hole.